

SAFETY AND OPERATING MANUAL

20V Vacuum Cleaner

WX030.9 I

PRODUCT SAFETY GENERAL SAFETY WARNINGS

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.







- Children should be supervised to ensure that they do not play with the appliance.

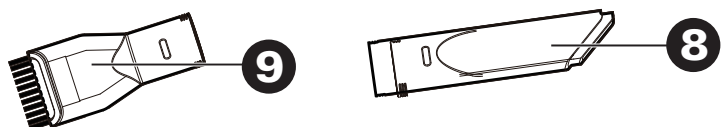 
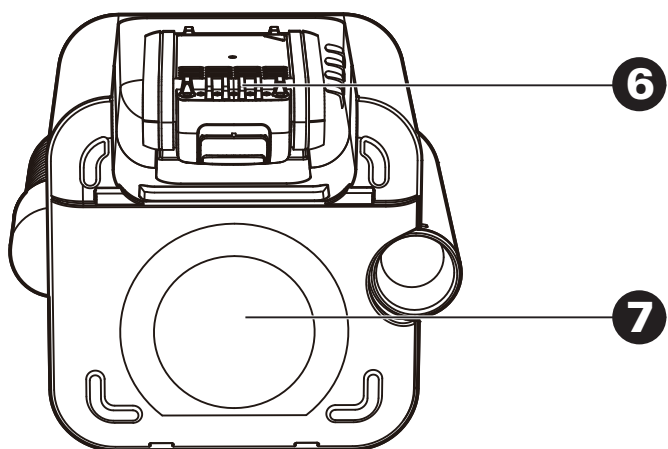 
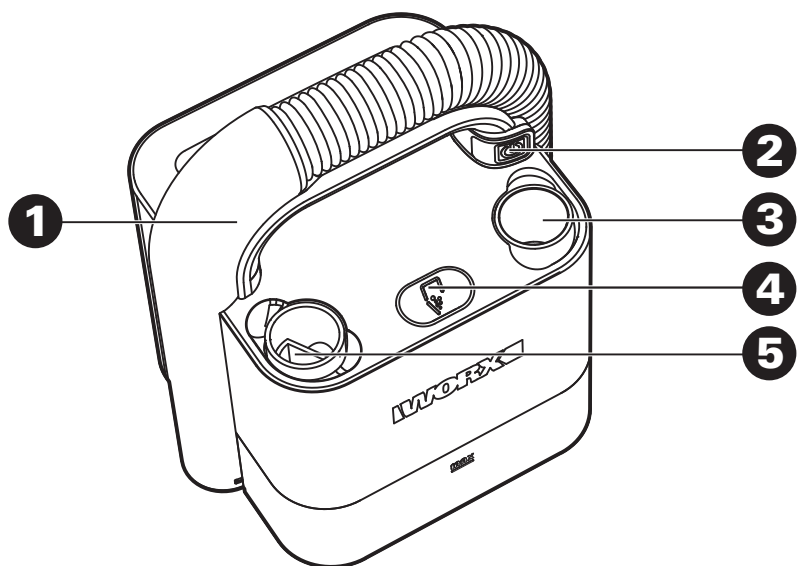 
SAFETY WARNINGS FOR BATTERY PACK

- a) Do not dismantle, open or shred cells or battery pack.
- b) Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.
- d) Do not subject battery pack to mechanical shock.
- e) In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- f) Seek medical advice immediately if a cell or battery pack has been swallowed.
- g) Keep battery pack clean and dry.
- h) Wipe the battery pack terminals with a clean dry cloth if they become dirty.
- i) Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.
- j) Do not maintain battery pack on charge when not in use.
- k) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- l) Battery pack gives its best performance when it is operated at normal room temperature ($20^{\circ}\text{C} \pm 5^{\circ}\text{C}$).
- m) When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.

- n) Recharge only with the charger specified by Worx. Do not use any charger other than that specifically provided for use with the equipment. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- o) Do not use any battery pack which is not designed for use with the equipment.
- p) Keep battery pack out of the reach of children.
- q) Retain the original product literature for future reference.
- r) Remove the battery from the equipment when not in use.
- s) Dispose of properly.
- t) Do not mix cells of different manufacture, capacity, size or type within a device.
- u) Do not remove battery pack from its original packaging until required for use.
- v) Observe the plus (+) and minus (-) marks on the battery and ensure correct use.

 
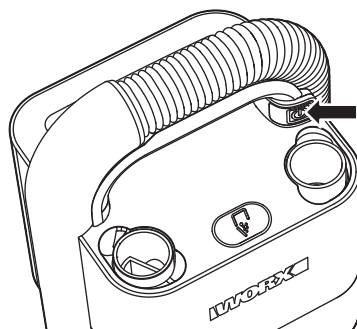 
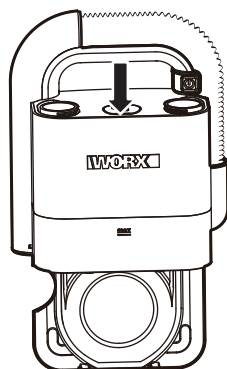 
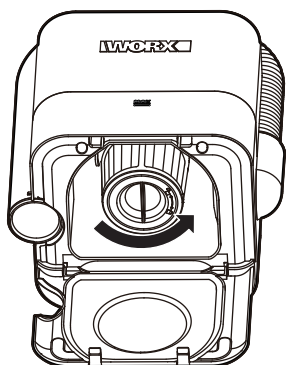 
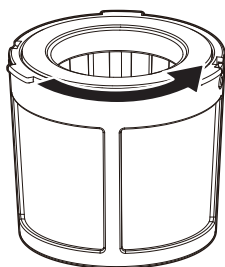 
SYMBOLS

	Warning
	Read operator's manual
	RCM marking
	ABN: Australian Business Number. By this number, business information such as entity type, status, business location etc. can be found at website http://abr.business.gov.au . ABN of Positec Australia Pty Limited is 14 101 682 357
 Li-Ion	Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances
	Do not burn
	Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.

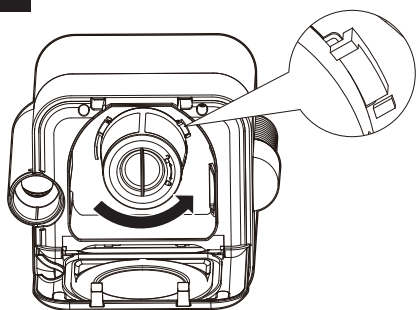 


20V Vacuum Cleaner

WX030.9 I

A1**A2****B****C1****C2****D1**

D2



COMPONENT LIST

1. VACUUM TUBE
2. ON-OFF SWITCH
3. BRUSH STORAGE PORT
4. DEBRIS EMPTYING BUTTON
5. CREVICE TOOL STORAGE PORT
6. BATTERY PACK*
7. DEBRIS CONTAINER COVER
8. CREVICE TOOL ACCESSORY
9. BRUSH ACCESSORY

*Some of the accessories mentioned in illustrations or texts are not included in the scope of supply.

TECHNICAL DATA

	WX030.91
Rated voltage	20V
Maximum idle speed	3400/min
Machine weight	1.4kg

ACCESSORIES

	WX030.91
Brush accessory	1
Crevice tool accessory	1

We recommend that you purchase your accessories listed in the above list from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATION INSTRUCTION



Note: Please read the instructions carefully before use.

INSTALLATION AND OPERATION

1. Installation of the Brush/Crevice Tool
Remove accessory from the storage port, connect to the vacuum tube by pushing into place (See figure A1)

NOTE: Crevice tool accessory can be stretched out for usage (See figure A2)

2. Start/Stop (See figure B)

Press the on-off switch button to start the vacuum cleaner operation, and press again to stop it.

WARNING: Please keep the air intake unobstructed, otherwise it may cause motor overheating and may damage the machine.

3. Debris Emptying Cleaning(See figure C1,C2)

Press the debris emptying button to open the dust cup. Rotate the filter counter-clockwise to remove and rinse in clean water when needed. To reinsert the filter, rotate clockwise and lock filter element in place.

WARNING: Do not use the vacuum without installing the filter element. If the suction becomes decreased, it is necessary to clean out the debris in the debris collection container

4. Filter Cleaning

The filter is composed of the filter net cylinder and the HEPA filter. Remove both and discard debris (see figure D1). Both filters can be rinsed in clean water and air dried. Replace HEPA filter inside Net cylinder filter, rotate clockwise until locked. Locate three long slots on HEPA filter and match those in the debris collection container. Rotate clockwise to secure connection prior to using. (See figure D2)

Note: In order to maintain excellent suction, it is recommended to change HEPA every three months.

MAINTENANCE

WARNING: Remove the battery before carrying out any servicing or maintenance.

Never use water or chemical cleaners to clean your vacuum cleaner. Wipe clean with a dry cloth. Always store your vacuum cleaner in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. If you see some sparks flashing in the ventilation slots, this is normal and will not damage your vacuum cleaner.

Operation instructions for the accessories

The brush is suitable for dust removal from inaccessible corners in the interior of the car, such as the bottom of the seat, the side of the seat, the

inside of the door, the area around the driver’s seat, the rear window, the trunk of the car, etc.
The crevice tool can be used to clean most of the cracks and corners of the car.

Precautions when using the machine

Cannot be used to absorb water.
Cannot be washed in water.
Check the hoses regularly and stop using if there is any damage.
When cleaning or maintaining, remove the battery pack.

STORAGE

Clean the moulded plastic housing of the machine using a soft brush and clean cloth. Do not use water, solvents or polishes. Remove all debris, especially from the motor cooling vents.
Store in a secure, dry place out of the reach of children.
Do not place other objects on the product.

ENVIRONMENTAL PROTECTION



Disposal
The machine, its accessories and packaging materials should be sorted for environmentally friendly recycling. The plastic components are labeled for categorized recycling.

TROUBLESHOOTING

Issue	Causes	Solutions
Motor does not operate	The battery has run out.	Remove the battery pack and insert charger for charging.
Decreased suction	Dust cup is full of dust.	Clean the dust in the dust cup.
	The filter element of the dust cup is full of dust.	Clean or replace filter element of dust cup
	Battery low	Remove the battery pack and insert charger for charging.
	Hose blocked	Straightening hose after power-on can inhale some foreign body.
Machine heating	Machine run	Slight heating-up is normal.
The battery is fully charged and the dust in the dust cup does not rotate.	The airway is blocked by foreign bodies.	Clean up foreign bodies in the airway in time.

Positec Australia Pty Limited
10 Corporate Blvd Bayswater , VIC 3153,Australia



www.worx.com

Copyright © 2020, Positec. All Rights Reserved.
AR01554300